Table of Contents

1 Safety Information 2

1.1 Precautions 2
1.2 Safety Notice 3

2 Appearance 5

3 The Basics 6

3.1 Power On / Off 6
3.2 Power saving mode 7
3.3 Soft keys 7
3.4 Charging the device 8
3.5 Connecting to PC 8
3.6 Using MicroSD slot 9
3.7 Using USB port 9
3.8 Accounts 10

4 Main Settings 12

4.1 WI-FI 12
4.2 Bluetooth 12
4.3 Apps 12
4.4 Security 13
4.5 Language & input 13
4.6 Backup & reset 13
4.7 Multi window 14
4.8 Wireless Display 16

5 Product Specification 18

Safety Information

-1 Precautions

〉Please keep the device dry. Please don't let the device, battery and charger contact water or water vapor and do not operate device or charger with wet hands, so as not to result in short circuit of the device, breakdown caused by corrosion and electric shock of personnel.

〉Please don't let the device, battery and charger receive strong shock, for fear of breaking down, catching fire or explosion of device(battery).

〉Please don't place the device, battery under too high or too low temperature, otherwise breakdown, catching fire or explosion of device(battery) would be caused.

〉Please don't strike, throw or pinprick the device, and falling, extrusion and bending of device must be avoided.

〉Please don't disassemble the device and its accessories by yourself, otherwise the device and its accessories will be out of warranty scope by our company.

Safety Information

- 2 Safety Notice

〉Please don't use the device when you are driving, for fear of hindering safe driving.

〉In medical places, please observe relevant stipulations and regulations. And in regions near the medical equipment, please shut down the device.

〉Please shut down the device when boarding, so that the wireless signals will not interfere with control signals of the airplane.

〉Please shut down the device neighboring electronic equipment with high accu-racy, otherwise breakdown of electronic equipments might be caused.

〉Please keep the device far away from magnetic equipment, radiation from MID will erase information stored on the magnetic equipment.

〉Please don't use the device under high temperature and nearby inflammable gas (such as nearby gas station).

Safety Information

- 2 Safety Notice

〉Please don't let children use the device without supervision.

〉During the use of device, please confirm any related laws and regulations, also respect privacy and legitimate rights of others.

〉Please strictly abide by relevant explanations in this manual when using USB cable, otherwise the device might be damaged.

SUNGWOO mobile

Appearance

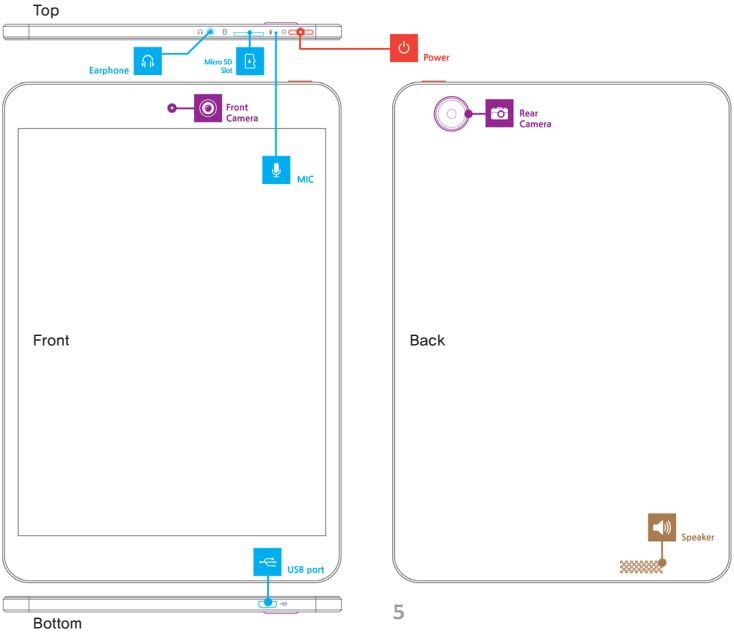
Top
Earphone
Micro SD Slot
Power
Front Camera
MIC
Front
Back
Rear Camera
Speaker
USB port
Bottom

The Basics

-1 Power On / Off

Power On : Press the "Power" button on the upper of the device for 3~4 seconds.
Power Off : Press the "Power" button on the upper of the device for a couple of seconds until a Power Off menu appears. Touch "OK" to turn off the device.

Unlock the device

Right after the device is on, the device is locked. To unlock the device, touch "Lock" and swipe right.

*. When the device is unresponsive, you can turn off the device by pressing "Power" button for about 10 seconds

SUNGWOO mobile

- 2 Power saving mode

When the device is on, press "Power" button to enter the Power saving mode and then the screen will be off.

To escape the Power saving mode, press "Power" button.

- 3 Soft keys

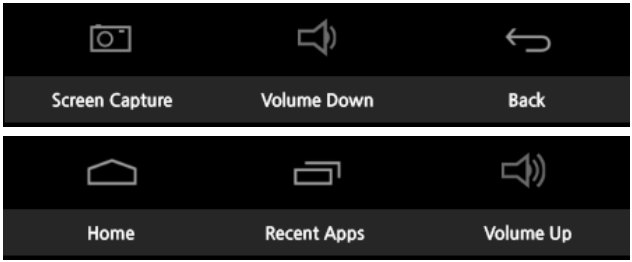

- 4 Charging the device

The device can be charged by 5V 2A adaptor or USB cable (slower).

When you charge the device for the first time, please charge the device completely for 5~6 hours with 5V 2A adaptor or more hours with USB cable.

When the battery is completely consumed, turn on the device after charging the device at least for 5~10 minutes.

*. Notice : Please use the adaptor of 5V 2A standard for charging the device. Otherwise, the device can malfunction or broken.

- 5 Connecting to PC

The device can be connected to a PC via USB cable.

When the device is connected to a PC with USB cable, you can transfer files from the device(or PC) to PC(or device).*

- 6 Using MicroSD slot

The device supports MicroSD card with the maximum capacity of 32GB.

To mount the MicroSD card, you can insert the MicroSD card to the MicroSD card slot.

To unmount(remove) the MicroSD card, you can gently push the MicroSD card inside. **(Note : The MicroSD card is NOT provided.)**

- 7 Using USB port

Using OTG cable, you can read USB memory card or connect a mouse or a keyboard with the device.

(Note : Some additional accessories (USB memory card, mouse, etc.) may not be compatible with the device.)

(Note : The OTG cable is NOT provided.)

- 8 Accounts

Touch "Add account" after WIFI is connected.

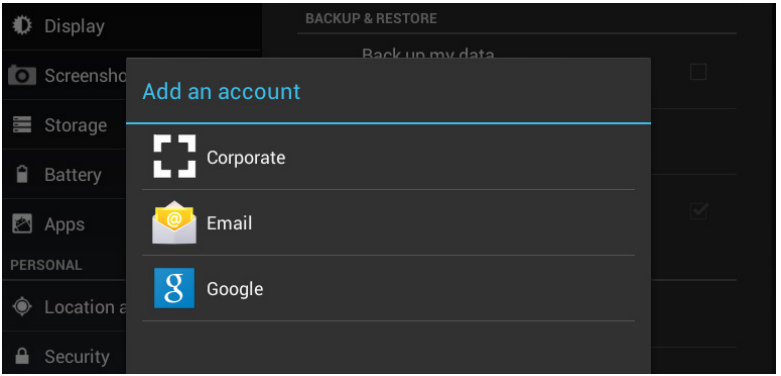

Google : Add your google account to use the Google Android fearures such as Gmail, Google Play, etc.

(Note : If you don't have your Google account, you can make your Google account by touching "New".)

SUNGWOO mobile

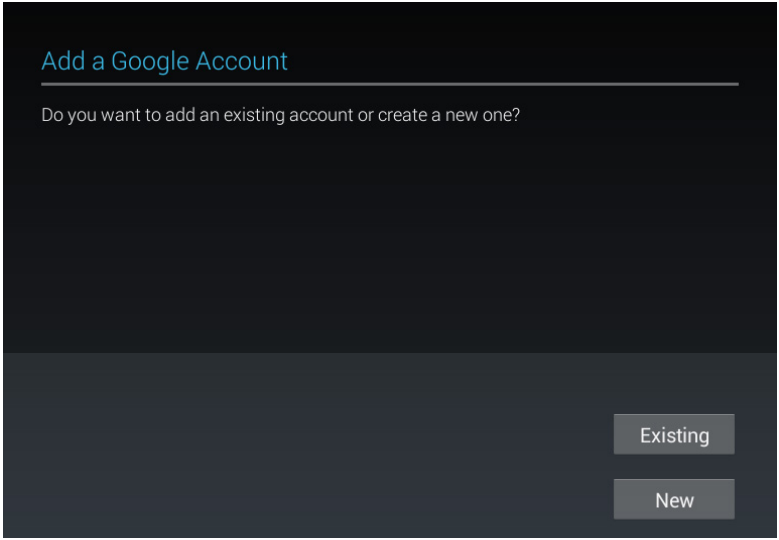
Add a Google Account
Do you want to add an existing account or create a new one?
Existing
New

Main Settings

- 1) Wi-Fi

Settings 〉 Turn on the Wi-Fi 〉 Choose your Wi-Fi service.

- 2 Bluetooth

Settings 〉 Turn on the Bluetooth 〉
See the "AVAILABLE DEVICES" and choose the device you want to connect with.

- 3 Apps

You can see all the applications in the device and you can "Uninstall", "Force stop" or "Disable" an application.

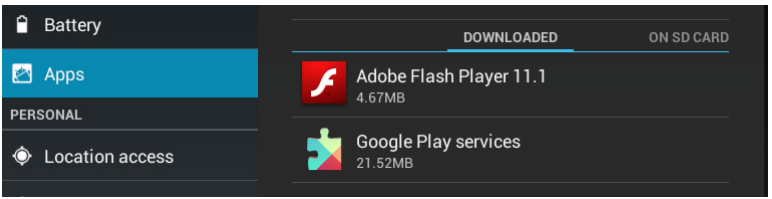

SUNGWOO mobile

- 4 Security

Screen lock

To secure your device from unauthorized use, you can set several options for Screen lock. You can set **None | Slide | Face Unlock | Pattern | PIN | Password**

Unknown Sources

This menu allows installation of apps from unknown sources.

- 5 Language & input

You can use this menu to change the language on the device.

Language : Select the language shown on the device.
Default : Select the default keyboard.
Pointer speed : Set the pointer speed for mouse or trackpad connected to your device additionally.

- 6 Backup & Reset

Factory data reset : You can erase all of the data on the phone and the device is returned to the factory's setting.

- 7 Multi window

Settings 〉 Turn on the Multi window

When this feature is turned on, you can do multi–tasking operations in multiple window views on the screen.

There are two types of multi–window view:
- Quarter–screen : displays up to four windows on the screen
- Half–screen : displays up to two windows on the screen

Operation

In order to manipulate (e.g: move, resize) the window(s), you need to trigger the window(s) into drag–and–move state.
Slide three fingers inside the window of a running application until the window(s) becomes blurred. The window(s) is now in drag–and–move state.

To move a window: Under the drag–and–move state, tap one finger inside the window you wish to move. To resize a window : Under the drag–and–move state, use two fingers to resize the window.

*. Tip: You may utilize the icon that appears at the right side of the screen to arrange the window.

SUNGWOO mobile

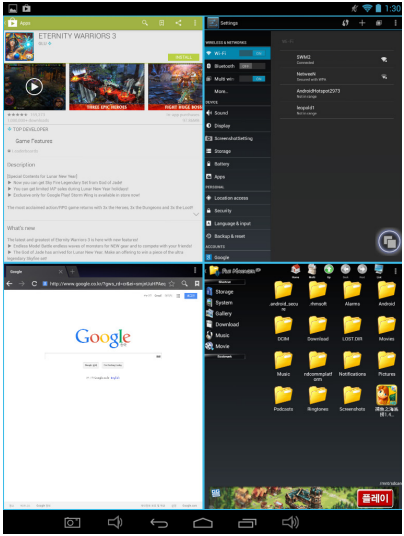

Normal State

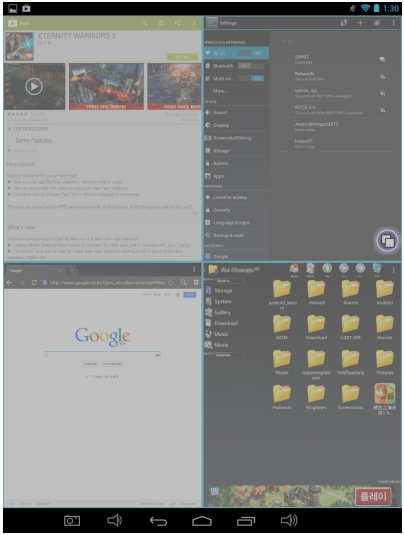

Drag-and-move State

- 8 Wireless Display

This menu allows device to enable wireless display using "WIFI Display Dongle".
(Note : "WIFI Display Dongle" is NOT included in the package.)
(Note : This Wireless Display may not work properly depending on "WIFI Display Dongle" or your television.)

- 8 Wireless Display

Turn on the "Wireless display"

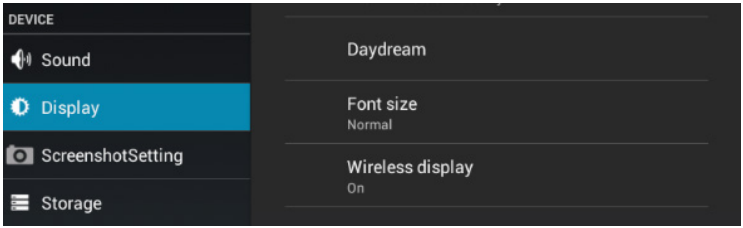

Select the device you want to pair at "AVAILABLE DEVICES".

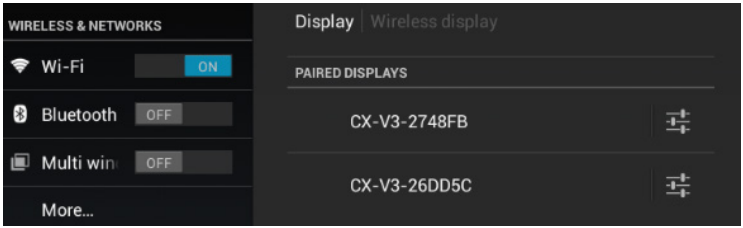

Product Specification

〉 Info	
Size	201 x 136.5 x **6.5 mm**
Weight	**300 g**
〉 Performance	
CPU	**Quad Core CPU 1.6GHZ**
GPU	Mali-400 MP4 @ 533MHZ
RAM	1GB DDR3
Storage	**16GB** (Support upto 32 GB)
OS	Android 4.2.2 (Jellybean)
〉 DISPLAY	
Panel	7.85" Multy-touch IPS Display
Resolution	1024 x 768 (4:3)

SUNGWOO mobile

〉Camera

Front	2.0 MPX
Rear	5.0 MPX (Auto Focus)

〉Built-in

Bluetooth	Bluetooth 4.0
WLAN	WIFI 802.11 b/g/n
Battery	4000mAh 3.7 V (5V 2A)
Audio	MIC / 3.5mm (out)
Interface	USB OTG / Micro SD / Headphone

〉Codec

Audio codec	MP3, WMA, WAV, (APE, FLAC, AAC, OGG be supported by 3rd party software)
Video codec	MOV,MKV,AVI,RMVB,RM,TS,TP,M2TS,MPEG,MP4,PMP,3GP, FLV WMV,ASF etc.

MEMO